



WP4101AP

QUICK START GUIDE

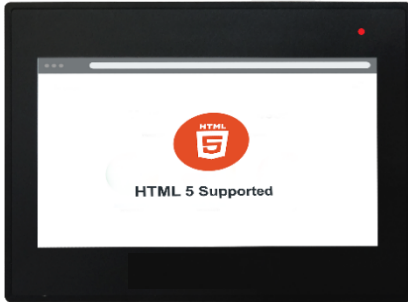

Product Code:

Series
Display Size
PCAP Configuration

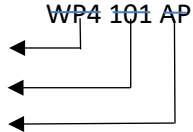

INTRODUCTION

The **WP4000AP** is an HTML5 powered client device with a built-in Chromium browser, which connects to a remote web server on its network.

All WP4000AP devices are compliant with EMC directive 2014/30/EU and LVD directive 2014/35/EU and certified for UL Class I Div. 2.


SPECIFICATIONS

Power	24VDC (+20%, - 15%), 350mA , 8.5W
Display	1024 x 600 pixels, 10.1" Color TFT, WSVGA PCAP Touch Screen
Memory	eMMC: 4GB RAM: 1GB
USB Ports	1 USB Slave and USB Host
Ethernet	1 Ethernet Port
Panel Cutout	256.00(W) x 178.00(H)mm
Dimensions	268.00(W) x 190.00(H) x 33.00(D)mm
Weight	Approx. 900gm
LED	1
Environment & Approvals	
Operating Temperature	0 to 50°C
Storage Temperature	-20 to 85°C
Humidity	10 to 90% (Noncondensing)
Shock	IEC 60068-2-27 25g, 11ms, 6 shocks per axis, total 18 shocks (X, Y, Z)
Vibration	IEC 60068-2-6 5 to 150Hz, 3g peak (X, Y, Z)
EMC	EN 55011 : 2009/A1 : 2010 EN 61131-2 : 2007 EN 61000-6-2 : 2005/AC : 2005 EN 61000-6-4: 2007/A1: 2011
Protection	IP66 for front panel mounting
Approvals	CE, UL & RoHS compliant

Default Product Settings

Network Settings	DHCP
Brightness	Full Scale
Screen Touch Beeper	On
Default Language	English

PRODUCT DIMENSIONS

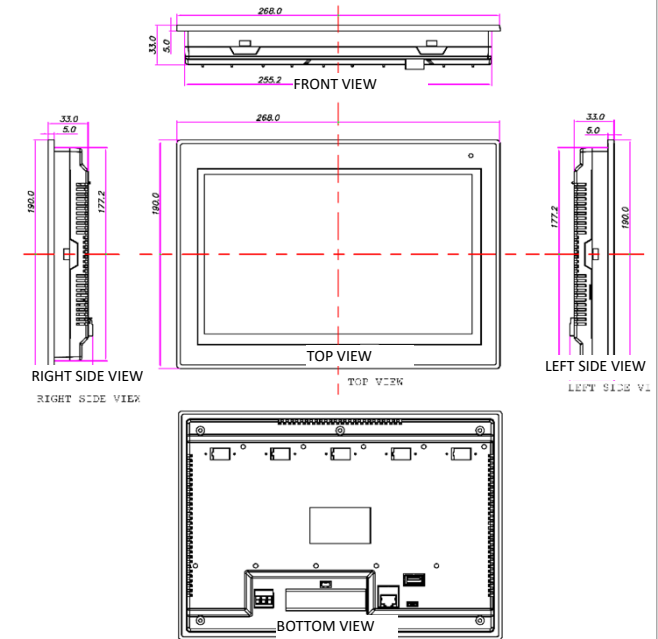


PANEL CUTOUT DIMENSIONS

Panel Cutout Dimensions: 256.00 (W) x 178.00(H)mm

Panel Thickness: Maximum 6mm

Mounting Clamps: 6

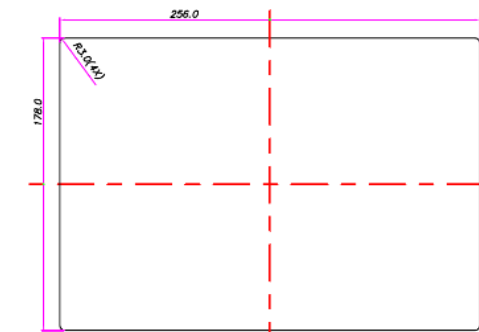

Tighten the mounting screws evenly to a torque approximately 0.4N/m to maintain water and dust resistance.



For More Information, visit
<https://www.maplesystems.com>

COMMUNICATION

This section provides information regarding communication interfaces supported by this product.

Ethernet Port

The WP4000AP series devices come with a built-in Ethernet port.

1. Fully compliant with IEEE 802.3 / 802.3u standards.
2. 10/100 Mbps support.
3. Connector used: Standard shielded RJ-45 female jack with in-built speed and link activity indication LEDs.

Pin number	Signal
1	TX+
2	TX-
3	RX+
4	NC
5	NC
6	RX-
7	NC
8	NC

USB Slave Port (2.0)

The WP4000AP comes with a Type C USB device port.

USB Host Port

The WP4000AP devices supports one USB Host port that connects to a USB 2.0 compatible USB Flash drive. This port can be used to upgrade the firmware and the browser.

Pin number	Signal
1	VCC
2	D-
3	D+
4	GND




GETTING STARTED

To use the WP4000AP as a browser, follow these steps to connect the device to a Webserver. The Password for configuring the device is **admin@123**.

[Note: For configuring new Password it must be at least 7 or more characters with 1 capital letter (0-9, a-z, A-Z)]


1. Connect an Ethernet cable to the device.
2. Power up the device using 24VDC power supply by connecting it to the device's pluggable terminal block.
3. If the browser or the firmware needs to be updated, connect a USB flash drive to the device.

MAIN SETTINGS

Settings	Description
	Device Settings button. Settings for Network, Calibration, Password and Brightness can be accessed using this button.
	URLs Settings button.
	Device Information button.

Grounding

The optimum method for Grounding electronic equipment is to ground it separately from other high-power systems and to ground more than one unit of electronic equipment with a single-point ground. The Grounding marked terminal (see below) is provided on the unit.

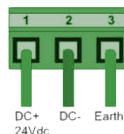

[Note: Do not use a ground that has an unstable impedance, such as painted screws or a ground subject to vibration.]

UL APPROVAL

CONTROL DRAWING NO# CNTL/DWG/1011-0721

hazardous Location
Class I Division 2 Groups A B C and D

non-hazardous Location

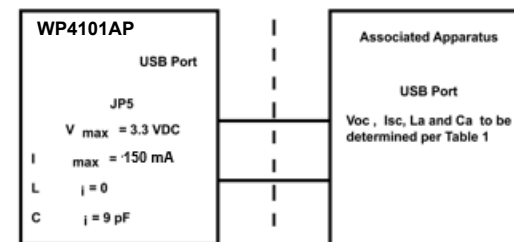


TABLE 1:

Nonincendive Equipment	Associated Apparatus
V max (or Ui)	Voc or Vt (or Uo)
I max (or Ii)	Isc or It (or Io)
Ci + Ccable	Ca (or Co)
Li + Lcable	La (or Lo)

Capacitance and inductance of the field wiring from the nonincendive equipment to the associated apparatus shall be calculated and must be included in the system calculations as shown in Table 1.

Where the cable capacitance and inductance per foot are not known,

WARNINGS

- This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.
- WARNING – EXPLOSION HAZARD – Do not disconnect equipment unless power has been removed or the area is known to be non-hazardous.
- WARNING – EXPLOSION HAZARD - Substitution of components may impair suitability for Class I, Division 2.
- The list of materials used in the construction of these devices with name of sealed device - generic name of the material and the supplier's name and type designation.
- It is recommended that the user periodically inspect the sealed devices used, for any degradation of properties and replace the device if any degradation is found.

REVISION HISTORY

Rev.	Description	Date
00	Initial Release	24/04/2024
01	Updating Control Drawing No#	05/15/2024

Maple Systems Inc® reserves the right to change or discontinue specifications and features without prior notice.

To view the latest and updated datasheets/manuals please visit www.maplesystems.com.