

MS1-L05G01F

Quick Start Guide

1. Overview

The MS1-L05G01F Lite-Managed Industrial Ethernet Switch is designed for semi-harsh environments to withstand vibration, shock, free fall and power surges. The switch is easy to set-up and supports the critical software features required in factory automation systems such as multi-axis robots and their peripherals (PLC's, HMI's, and legacy devices). It includes 5-port 10/100/1000Mbps RJ45 downlink and 1-port multi-rate FX/GbE SFP uplink.


2. Package Checklist

The switch is shipped with the following items*. If any of these are missing or damaged, please contact your customer service representative for assistance.

- MS1-L05G01F Switch x 1
- Quick Start Guide x 1

*Contents of the package can be adjusted based on customer demand.

Panel view

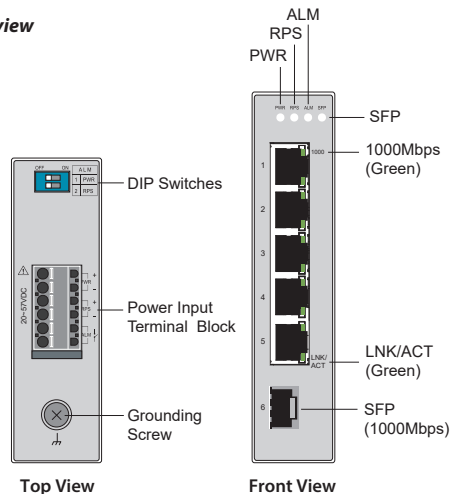

3. Mounting and Dismounting to DIN-Rail



ATTENTION:


The Switch is an open type device and shall be DIN-Rail mounted or wall mounted (optional) in the cabinet and the ambient temperature should not exceed the operating temperature.

Mounting the switch

Place the switch on the DIN-Rail from above using the slot, push the front of the switch toward the mounting surface until it snaps into place with a click sound.

Dismounting the switch

Press the switch from top and pull out the lower edge of the switch and then remove the switch from the DIN-Rail.

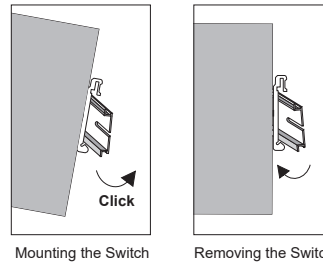

ATTENTION:

A corrosion-free mounting rail is advisable. When installing, make sure to allow for enough space between devices to properly install the cabling. And provide ample space for air flow.

4. Grounding the switch

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.



ATTENTION:

This product is intended to be mounted to a well-grounded mounting surface such as a metal panel.

5. Wiring requirements



WARNING:

Safety measures should be taken before connecting the power cable. Turn off the power before connecting modules or wires. The correct power supply voltage is listed on the product label. Check the voltage of your power source to make sure that you are using the correct voltage. DO NOT use a voltage greater than what is

specified on the product label. Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If current exceeds the maximum rating, the wiring can overheat causing serious damage to your equipment.

Please read and follow these guidelines:


- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross make sure the wires are perpendicular at the intersection point.
NOTE: Do not run signal or communications wiring and power wiring through the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- You should separate input wiring from output wiring.
- We advise that you label the wiring to all devices in the system.

5.1 Wiring Power Input

5.1.1 The Switch with terminal block

You can use "PWR" for Primary Power input and "RPS" for Redundant Power Input. Check the polarity while connecting.

Top view of Terminal Block is shown in the figure below:

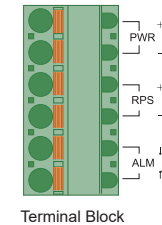

Caution:

- Use copper conductors only
- Wiring cable temperature should support at least **221°F (105°C)**
- The wire gauge for the terminal block should range between **12~24 AWG**



MISE EN GARDE:

- Utilisez uniquement des conducteurs en cuivre
- La température maximale du câble ne doit pas dépasser **221°F (105°C)**
- Le calibre de fil du bornier doit être compris entre **12 et 24 AWG**

To insert power wire and connect the specified voltage range at a maximum of 0.5A DC power to the power terminal block, follow the steps below:

1. Use a flat-head screwdriver to push in and open the wire clamp.
2. Insert the negative/positive DC wires into the (- / +) terminals, respectively as shown on the label.
3. Tighten the wire-clamp by releasing the screwdriver to prevent the wires from loosening.




For more information contact Maple Systems at:

email: sales@maplesystems.com
Tel.: (425) 745 3229

**ATTENTION:**

Please use a power supply from 20~57VDC, the device power shall be supplied by SELV circuit.

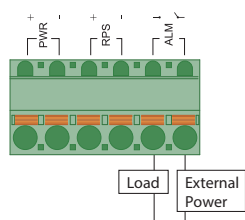5.2 Wiring the relay contact (ALM)

Relay rating: 24V, 1A

The switch has one set of relay alarm output. This relay contact uses two contacts of the terminal block on the switch top panel. The two contacts of the terminal block connector are used to detect user-configured events. The two wires attached to the fault contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the fault circuit remains closed.

5.3 Cabling RJ45

Connect one end of an Ethernet cable into the Ethernet port of the switch and the other end to the attached networking device.

- Ports 1-5 supports 10/100/1000Mbps speed
- Ports 6 supports 100FX/Gigabit speed
- All the RJ45 ports on the switch support auto-negotiation and auto MDI/MDI-X to eliminate the need for crossover cabling.

* Category 5e cable or above should be used.

6. DIP Switch Setting

	OFF	ON
	1	2
1	PWR	ON: Primary power alarm reporting is enabled OFF: Primary power alarm reporting is disabled
	2	RPS
2	RPS	ON: Redundant power alarm reporting is enabled OFF: Redundant power alarm reporting is disabled

7. LED Indicators

PWR (Green)	Illuminated	Primary power on
	Off	Primary power off or failure
RPS (Green)	Illuminated	Redundant power on
	Off	Redundant power off or failure
ALM (Red)	Illuminated	Alarm triggered for abnormal power status and anomalous features.
	Off	Normal operation or DIP switch OFF

1000 (Green) (1~5 th RJ45 port)	Illuminated	Link speed at 1000Mbps
	Off	Link speed at 10/100Mbps
LNK/ACT (Green) (1~5 th RJ45 port)	Illuminated	Port link-up
	Blinking	Activity (receiving or transmitting data)
	Off	Port disconnected or link failed
SFP (Green) (6 th Fiber port)	Illuminated	Port link-up
	Blinking	Activity (receiving or transmitting data)
	Off	Port disconnected or link failed

8. Environmental limits

Operating Temperature	14°F~140°F (-10°C~60°C)
Storage Temperature	-40°F~185°F (-40°C~85°C)
Ambient relative humidity	5 to 95% (non condensing)

**ATTENTION:**

This device complies with Part 15 of the FCC rules.

Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

**ATTENTION:**

If the equipment is used in a manner not specified by the VOLKTEK, the protection provided by the equipment may be impaired.

**ATTENTION:**

Please leave at least 5cm of space at the left and right of the unit for ventilation.

9. Configuration

Connect through Web Browser:

- Connect your computer to one of the Ethernet ports.
- Use the default IP-address 192.168.100.254 to login to the switch.

Default Username	admin
Default Password	admin

NOTE: For more details on configuration please refer user manual.

LIMITED WARRANTY

Maple Systems warrants that new hardware Products will be free from electrical and mechanical defects in materials and workmanship Two (2) years from the date of shipment for parts and labor. Maple Systems does not warrant and will not be liable for any design, materials, construction criteria or goods furnished or specified by buyer (including that sourced from other manufacturers or vendors specified by buyer). Any warranty applicable to such buyer-specified items will be limited solely to the warranty, if any, extended by the original manufacturer or vendor directly or indirectly to buyer. Maple Systems does not warrant the compatibility of its products with the goods of other manufacturers or buyer's application except to the extent expressly represented in Maple Systems published specifications or written quotation.

As Maple Systems is not responsible for, nor has control over, the setup, configuration, usage, or operation of the product, Maple Systems will not be liable for any resulting harm, injury, or damage (whether direct or indirect in nature). Those responsible for the use and application of this product accept all responsibility and liability, and must satisfy themselves that all essential steps have been taken to meet all performance and safety requirements, regulations, codes, standards, and applicable laws. As any installation shall have its own specific requirements, regulations, or conditions, all pictures, graphs, samples, diagrams, examples, illustrations, and the like, are intended for the purpose of example only. Maple Systems is not responsible or liable for any harm, injury, or damage (whether direct or indirect in nature) that may occur from the use of this product.

Remedies under the above warranties will be limited, at Maple Systems option, to the replacement, repair, or issuance of a credit for the purchase price, of the Maple Systems products involved, and where applicable, only after the return of such products pursuant to Maple Systems instructions. The foregoing will be the exclusive remedies for any breach of warranty or breach of contract arising therefrom.

Warranty satisfaction is available only if (a) Maple Systems is provided prompt written notice of the warranty claim and (b) Maple Systems examination discloses that any alleged defect has not been caused by misuse; neglect; improper installation, operation, maintenance, repair not authorized by Maple Systems, alteration or modification by other than Maple Systems; accident; use on current or voltages other than specified specifically by Maple Systems, application or installation not in accordance with published instruction manuals or unusual deterioration or degradation of the Products or parts thereof due to physical environment or electrical or electromagnetic noise environment. No license is granted by implication or otherwise under any patent or patent rights of Maple Systems, Inc. Maple Systems retains the right to revise or change its products and documentation at any time without notice.

Disclaimer and Limitation of Liability

TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW, MAPLE SYSTEMS WILL NOT BE LIABLE FOR ANY BUSINESS INTERRUPTION OR LOSS OF PROFIT, REVENUE, MATERIALS, ANTICIPATED SAVINGS, DATA, CONTRACT, GOODWILL OR THE LIKE (WHETHER DIRECT OR INDIRECT IN NATURE) OR FOR ANY OTHER FORM OF INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND. MAPLE SYSTEMS MAXIMUM CUMULATIVE LIABILITY RELATIVE TO ALL OTHER CLAIMS AND LIABILITIES, INCLUDING OBLIGATIONS UNDER ANY INDEMNITY, WHETHER OR NOT INSURED, WILL NOT EXCEED THE COST OF THE PRODUCT(S) GIVING RISE TO THE CLAIM OR LIABILITY. MAPLE SYSTEMS DISCLAIMS ALL LIABILITY RELATIVE TO GRATUITOUS INFORMATION OR ASSISTANCE PROVIDED BY, BUT NOT REQUIRED OF MAPLE SYSTEMS HEREUNDER. THESE DISCLAIMERS AND LIMITATIONS OF LIABILITY WILL APPLY REGARDLESS OF ANY OTHER CONTRARY PROVISION HEREOF AND REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHERWISE, AND FURTHER WILL EXTEND TO THE BENEFIT OF MAPLE SYSTEMS VENDORS, APPOINTED DISTRIBUTORS AND OTHER AUTHORIZED RESELLERS AS THIRD-PARTY BENEFICIARIES. EACH PROVISION HEREOF WHICH PROVIDES FOR A LIMITATION OF LIABILITY, DISCLAIMER OF WARRANTY OR CONDITION OR EXCLUSION OF DAMAGES IS SEVERABLE AND INDEPENDENT OF ANY OTHER PROVISION AND IS TO BE ENFORCED AS SUCH.